

# SC505

## 2D BARCODE SCANNER

### USER MANUAL



# SC505




## INTRODUCTION

This user's manual is designed to be use with your 2D barcode scanner. For more detailed information, please download the complete manual from our website [www.3nstar.com](http://www.3nstar.com) or obtain it from your dealer.

### **Restore Factory Settings**

Scanning the fallowing barcode restores the scanner to the factory defaults

“\*” Denotes default setting

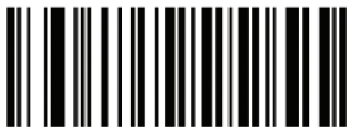


Restore Factory Setting


## Data Interface



\*USB-KBW

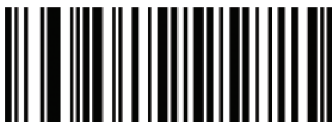

RS232

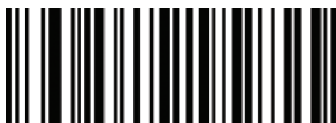

USB Virtual com

## Beep tones



\*ON



OFF

## Beep tones



High



Middle




Low

## Scan Mode



\*Normal Sensitivity

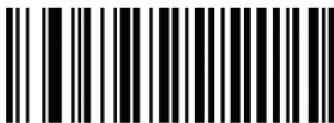

Low Sensitivity

## Scan Mode



High Sensitivity



Highest Sensitivity

## Caps Lock



\*Original Data



 
Lower Case Compulsive



Upper Case Compulsive



## Suffix



Disable




\*Enable



\*Enter (0X0D)

**Suffix**

 

TAB



0X0D+0X0A



F1

## Suffix



F10



F12

# Language



\*English



Spanish



Italian

# Language



German



French



Japanese

## Check Digit



Disable Transmit EAN13



\*Enable Transmit EAN13




Disble Transmit UPC A

## Check Digit



\*Transmit UPC A

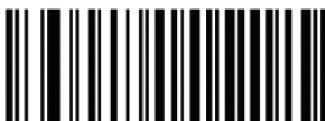

Full ASCII 39



\*Standar 39

## Global Setting



Enable All Codes



Disable All Codes



Enable 1D Codes



## Global Setting



Disable 1D Codes



Enable 2D Codes



Disable 2D Codes

## Global Setting

 


\*Enable Code 39



Disable Code 39

## Global Setting



\*Enable Code 128



\*Disable Code 128

